



REFRIGERATION AND  
AIR CONDITIONING

# INSTRUCTIONS

## AK - USB converter




080R9296



R18PJ100

**AK => USB => PC**

**AK => PC: max. 15 m**

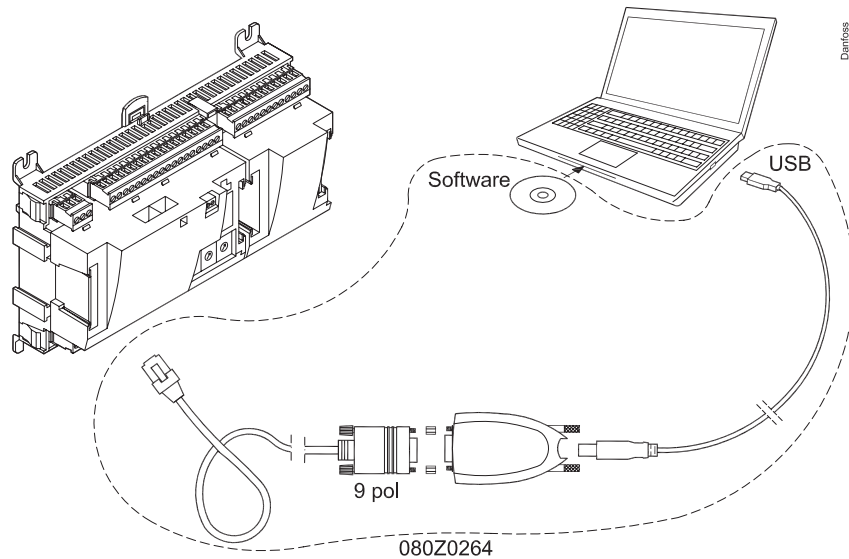

R18PJ100 05-2011