

### Data sheet

# Pressure Control, Differential Pressure Control, Type RT



An RT pressure control contains a pressure operated single-pole changeover contact, the position of which depends on the pressure in the inlet connection and the set scale value.

The RT series includes pressure controls for general applications within industrial and marine refrigeration.

The RT series also includes differential pressure controls, pressure controls for neutral zone regulation, and special pressure controls with gold-plated contact surfaces for PLC applications.

### Features

- Versions with enclosure IP66
- Wide regulating range
- Wide range of units for industrial and marine applications
- Suitable for alternating and direct current (a.c. and d.c.)
- Interchangeable contact system
- Special versions for PLC applications



### **Approvals**

RT 1	RT 1A	RT 1AL	RT 5A	RT 6W, 6B, 6S	RT 6AW, 6AB, 6AS	RT 30AW, 30AB, 30AS	RT 36B, 36S	RT 117	RT 117L	RT 200	RT 200L	RT 260A	RT 262A		
•				•		•		•		•				Germanischer Lloyd, GL	
								•		•				Det Norske Veritas, DNV	
								•		•				Bureau Veritas, BV	
•	•							•		•		•	•	Registro Italiano Navale, RINA	
•	•	•	•	•	•	•	•	•	•	•	•	•	•	Russian Maritime Register of Shipping, RMRS	
•	•		•					•		•				Nippon Kaiji Kyokai, NKK	
								•		•		•	•	Korean Register of Shipping, KRS	
•	•	•	•	•	•	•	•	•	•	•	•	•	•	CE marked according to 60947-4, -5	
				•	•	•	•							CE marked acc. to PED 97/23/EC category IV, safety equipment and EN 12263	
•	•	•	•	•	•	•	•	•	•	•	•	•	•	China Compulsory Certificate, CCC	

### **Technical data**

Cable connection	2 × Pg 13.5 Cable diameter 6 – 14 mm
Enclosure	IP66 to EN 60529 / IEC 529, except for versions with ext. reset which are IP54
Ambient temperature	-50 – 70 °C for pressure control housing
Switches	See "Ordering, switches" (below)
solid / stranded	0.2 – 2.5 mm <sup>2</sup>
Flexible, without ferrules	0.2 – 2.5 mm <sup>2</sup>
Flexible, with ferrules	0.2 – 1.5 mm <sup>2</sup>
Tightening torque	max. 1.5 Nm
Rated impulse voltage	4 kV
Pollution degree	3
Short circuit protection, fuse	10 Amp
Insulation	400 V




# Materials in contact with the medium

Туре	Bellows	Material	W. no.	To EN	Comments
	017-7253	Steel	1.0338	10139	Nickel-plated
	017-7254	Steel	1.0401	10277-2	Nickel-plated
	017-7258	Stainless Steel	1.4306	10088-2	_
DT 260AL	017-7260	_	_	_	_
RT 260AL, RT 262AL,	017-7252	_	_	_	_
RT 263AL,	017-7274	_	_	_	_
RT 265A, RT 5A,	017-7253	_	_	_	_
RT 5AL,	017-7258	_	_	_	_
RT 260A	017-7269	_	_	_	_
	017-7270	_	_	_	_
	_	Aluminium 1)	3.0255	573-3	_
	_	Steel 1)	1.0402	10250-2	Zn-plated
	017-7256	Steel	1.0338	10139	Nickel-plated, Tin-plated
	_	Steel	1.0718	10227-3	Nickel-plated
RT 1	_	Stainless Steel	1.4306	10088-2	_
	_	Steel	Spring wire type DH	10270-1	Zn-plated
	017-7275	Stainless Steel	1.4306	10088-2	_
RT 200,	_	Stainless Steel	1.4568	10270-3	_
RT 200L	_	Brass	2.0321	1652	_
	_	Brass	2.0402	12165	_
	017-7281	Steel	1.0332	10111	Nickel-plated
RT 6B,	017-7282	Steel	1.0338	10139	Nickel-plated
RT 6S, RT 6W,	017-7283	Steel	1.0718	10227-3	Nickel-plated
RT 6AB,	_	Stainless Steel	1.4306	10088-2	_
RT 6AS, RT 6AW	_	Aluminium 1)	3.0255	573-3	_
07.11	_	Steel 1)	1.0402	10250-2	Zn-plated
	017-7255	Steel	1.0338	10139	Nickel-plated, Tin-plated
	017-7259	Steel	1.0401	10277-2	Nickel-plated
RT 1A,	_	Stainless Steel	1.4306	10088-2	_
RT 1AL	_	Steel	Spring wire type DH	10270-1	Zn-plated
	_	Aluminium 1)	3.0255	573-3	_
	_	Steel 1)	1.0402	10250-2	Zn-plated
	017-7254	Steel	1.0338	10139	Nickel-plated
	017-7268	Steel	1.0401	10277-2	Nickel-plated
	017-7288	Stainless Steel	1.4305	10088-3	_
RT 262A	_	Stainless Steel	1.4306	10088-2	_
	_	Aluminium 1)	3.0255	573-3	_
	_	Steel 1)	1.0402	10250-2	Zn-plated
	017-7279	Stainless Steel	1.4306	10088-2	_
		Stainless Steel	1.4568	10270-3	_
RT 117, RT 117L	_	Brass	2.0321	1652	_
NI II/L	_	Brass	2.0401	12164	_
	_	Brass	2.0402	12165	_
	017-7284	Steel	1.0332	10111	Nickel-plated
RT 36B,	017-7286	Steel	1.0338	10139	Nickel-plated
RT 36S,	017-7283	Steel	1.0718	10227-3	Nickel-plated
RT 30AW, RT 30AB,	017-7286	Stainless Steel	1.4305	10088-3	
RT 30AS	_	Stainless Steel	1.4306	10088-2	_
	_	Stainless Steel	1.4568	10270-3	_

<sup>&</sup>quot;) Only in types with connection G 3/<sub>8</sub> A + weld nipple ø6.5/10 mm



### **Ordering**



### For HCFC and non-flammable HFC refrigerants

					Max.	Max.	Code no. Connection	
		Regulation	Differential		working	test		
Pressure	Type	range	Δр	Reset	pressure PS	pressure Pe	¹/₄ in. flare	G <sup>3</sup> / <sub>8</sub> A <sup>1)</sup>
		[bar]	[bar]		[bar]	[bar]	nare	
	DT 1	-0.8 – 5	0.5 – 1.6	Auto.	22	25	017-524566	_
Low	RT 1	-0.8 – 5	0.5	Man. (Min.)	22	25	017-524666	_
	RT 200	0.2 – 6	0.25 – 1.2	Auto	22	25	-	017-523766
High	RT 117	10 – 30	1 – 4	Auto	42	47	_	017-529566

<sup>1)</sup> BSP ext. thread, ISO 228-1.

### Safety – Pressure controls for R717, HCFC and non-flammable HFC refrigerants



					Max.	Max.	Cod	e no.
		Regulation	Differential		working	test	Connection	
Pressure	Туре	range [bar]	Δp [bar]	Reset	Pressure PS [bar]	pressure Pe [bar]	Cutting ring Ø6 mm	G <sup>3</sup> / <sub>8</sub> A <sup>1)</sup> + weld nipple Ø6.5 / 10 mm
		-0.8 – 5	0.5 – 1.6	Auto	22	25	017-501966	017-500166
Low	RT 1A	-0.8 – 5	0.5	Man. (Min.)	22	25	017-502766	017-500266
		-0.8 – 5	1.3 – 2.4	Auto	22	25	_	017-500766
Lligh	RT 5A	4 – 17	1.2 – 4	Auto	22	25	017-505266	017-504666
High	NI DA	4 – 17	1.3	Man. (Max.)	22	25	017-506166	017-504766

<sup>1)</sup> BSP ext. thread, ISO 228-1.

### Safety pressure controls with EN 12263 approval and CE marked acc. PED (Pressure Equipment Directive) \*)

			Differential		Max.	Max.		Code no.				
		Regulation	(fixed)	Reset	working	test	Connection					
Pressure	Туре	range	Δр		pressure PS	Pe Pe	¼ in. flare	Cutting ring ø6 mm	G <sup>3</sup> / <sub>8</sub> A <sup>1)</sup> + weld nipple	G ½ A¹)		
		[bar]	[bar]	[bar]	[bar]	[bar]			ø6.5 / 10 mm			
High	RT 36B 2)	0 – 2.5	0.2 6)	Man. (Max.)	22	25	017-525866	_	_	_		
	RT 36S 2)	0 – 2.5	0.2 6)	Man. (Max.)	22	25	017-525966	_	_	_		
	RT 6W 2)	5 – 25	3.0	Auto	34 5)	38	017-503166	_	_	_		
High	RT 6B 2)	10 – 28	1.0 <sup>6)</sup>	Man. (Max.)	34 5)	38	017-503466	_	_	_		
	RT 6S 2)	10 – 28	1.0 <sup>6)</sup>	Man. (Max.)	34 5)	38	017-507566	_	_	_		
	RT 30AW 3),4)	1 – 10	0.8	Auto	22	25	_	_	_	017-518766		
High	RT 30AB 3),4)	1 – 10	0.4 6)	Man. (Max.)	22	25	_	_	_	017-518866		
	RT 30AS 3),4)	1 – 10	0.4 6)	Man. (Max.)	22	25	_	_	_	017-518966		
	RT 6AW 3)	5 – 25	3.0	Auto	34 5)	38	_	017-513166	017-503266	_		
High	RT 6AB 3)	10 – 28	1.5 <sup>6)</sup>	Man. (Max.)	34 <sup>5)</sup>	38	_	017-513366	017-503566	_		
	RT 6AS 3)	10 – 28	1. 5 <sup>6)</sup>	Man. (Max.)	34 <sup>5)</sup>	38	_	017-514666	017-507666	_		

<sup>\*)</sup> Meets the requirements in VBG 20 on safety equipment and excess pressures.

- W=Wächter (pressure control).
- B= Begrenzer (pressure control with external reset).
- S= Sicherheitsdruckbegrenzer (pressure control with internal reset).

A rupture in the bellows system of the unit will cause the compressor to stop.

<sup>1)</sup> BSP ext. thread, ISO 228-1.

<sup>&</sup>lt;sup>2)</sup> Pressure controls for HCFC and non-flammable HFC refrigerants.

<sup>&</sup>lt;sup>3)</sup> Only types with letter A are suitable for R717, HCFC and non-flammable HFC refrigerants

 $<sup>^{\</sup>mbox{\tiny 4)}}\mbox{Approved}$  for PED also acc. to EN12953-9 and EN12922-11.

 $<sup>^{\</sup>rm 5)}$  Max. working pressure acc. to PED is limited to 28 bar.

<sup>6)</sup> Max.



# **Ordering** (continued)

Pressure controls with adjustable neutral zone for R717\*, HCFC and non-flammable HFC refrigerants

		Regulation	Differential		Max. working	Max. test	Code no. Connection	
Pressure	Туре	range	Δр	zone NZ Δp	Pressure PS	Pe The sale	Cutting ring ø6 mm	G <sup>3</sup> / <sub>8</sub> A <sup>1)</sup> + weld nipple
		[bar]	[bar]	[bar]	[bar]	[bar]		ø6.5 / 10 mm
	RT 1AL <sup>2)</sup>	-0.8 – 5	0.2	0.2 – 0.9	22	25	017L001666	017L003366
Low	RT 200L <sup>3)</sup>	0.2 – 6	0.25	0.25 – 0.7	22	25	_	017L003266 <sup>4)</sup>
	RT 5AL <sup>2)</sup>	4 – 17	0.35	0.35 – 1.4	22	25	017L001766 <sup>4)</sup>	017L004066
High	RT 117L <sup>3)</sup>	10 – 30	1.0	1 – 3.0	42	47	_	017L004266 <sup>4)</sup>

<sup>1)</sup> BSP ext. thread, ISO 228-1.

### Differential pressure controls for R717, HCFC and non-flammable HFC refrigerants



			Operating	Max.	Max.	Cod	e no.
	Regulation	Differential	range for	working	test	Connection	
Туре	range	Δр	LP bellows	Pressure PS	pressure Pe	Cutting ring	G <sup>3</sup> / <sub>8</sub> A <sup>1)</sup> + weld nipple
	[bar]	[bar]	[bar]	[bar]	[bar]	ø6 mm	ø6.5 / 10 mm
	0.5 – 4	0.3	-1 – 18	22	25	017D001466	017D002166
RT 260A	0.5 – 4	0.3	-1 – 18	22	25	_	017D002266 <sup>2)</sup>
K1 200A	0.5 – 6	0.5	-1 – 36	42	47	017D001566 <sup>4)</sup>	017D002366
	1.5 – 11	0.5	-1 – 31	42	47	017D001666	017D002466
RT 262A	0.1 – 1.5	0.1	-1 – 9	11	13	017D001366	017D002566
RT 265A 3)	1 – 6	0.5	-1 – 36	42	47	_	017D007266

<sup>1)</sup> BSP ext thread, ISO 228-1.

<sup>4)</sup> With 3 m capillary tube

# Differential pressure controls with adjustable neutral zone for R717, HCFC and non-flammable HFC refrigerants

	Regulation	Differential	Adjustable neutral zone	Operating range for	Max. working	Max. test	Code no. Connection
Туре	range	Δр	NZ	LP bellows	pressure PS	pressure Pe	G <sup>3</sup> / <sub>8</sub> A <sup>1)</sup> + weld nipple
	[bar]	[bar]	[bar]	[bar]	[bar]	[bar]	ø 6.5 / 10 mm
RT 262 AL	0.1 – 1.5	0.1	0.1 – 0.33	-1 – 9	11	13	017D004366

<sup>1)</sup> BSP ext thread, ISO 228-1.

<sup>&</sup>lt;sup>2)</sup> Pressure controls for R717 (NH3) HCFC and non-flammable HFC refrigerants

<sup>&</sup>lt;sup>3)</sup> Pressure controls for HCFC and non-flammable HFC refrigerants

<sup>4)</sup> Without nipple

<sup>\*</sup> Only types with letter A are suitable for R717

<sup>&</sup>lt;sup>2)</sup> Man. (Max.) reset.

 $<sup>^{3)}</sup>$  Filter monitor: Alarm  $\Delta p=0.8$  bar, cut-out  $\Delta p=1$  bar (factory setting).



## **Ordering** *(continued)*

### Switches 1)

Contact system versions	Contact system	Description	Contact load	Code no.
With automatic reset	1 • 4 2 SPDT	Single-pole changeover switch with terminal board proof against leakage current. Fitted in all standard versions of type RT. Snap action changeover contacts.	Alternating current <sup>2)</sup>	017-403066
With manual (max.) reset	1 • 4 2 SPDT	For manual reset of unit after contact changeover on rising pressure. For HP units prepared for reset facility.	Ohmic: AC 1 = 10 A, 400 V Inductive: AC 3 = 4 A, 400 V AC 15 = 3 A, 400 V	017-404266
With manual (min.) reset	1 • 4 2 2 SPDT	For manual reset of unit after contact changeover on falling pressure. For LP-units prepared for reset facility.	<b>Direct current</b> DC 13 = 12 W, 220 V	017-404166
With automatic reset, gold- plated	2 1 4 4 SPDT	Single-pole changeover switch with gold plated (oxide-free) contact surfaces. Increases cut-in reliability on alarm and monitoring systems, etc. Snap action changeover contacts. Terminal board proof against leakage current.	Alternating current 2)  Ohmic: AC 1 = 10 A, 400 V Inductive: AC 3 = 2 A, 400 V AC 15 = 1 A, 400 V Direct current DC 13 = 12 W, 220 V	017-424066
Cuts in two circuits simultan- eously	1 4 2 2 SPST	Single-pole changeover switch that cuts in two circuits simultaneously on rising pressure. Snap action changeover contacts. Terminal board proof against leakage current.	Alternating current 2)  Ohmic: AC 1 = 10 A, 400 V Inductive: AC 3 = 3 A, 400 V AC 15 = 2 A, 400 V Direct current DC 13 = 12 W, 220 V 3)	017-403466
With non- snap action changeover contacts	2 1 4 \$ \$ \$	Single-pole changeover switch with non-snap action changeover contacts.	Alternating or direct current 25 VA, 24 V	017-018166

 $<sup>^{\</sup>scriptscriptstyle 1)}$  RT pressure controls meet the conditions of EN 60947-2-9.

The switches are shown in the position they assume on falling pressure, i.e. after downward movement of the RT main spindle.

The setting pointer of the control shows the scale value at which contact changeover occurs on falling pressure.

An exception is RT with switch code no. **017-404266** with Man. reset, where the setting pointer shows the scale value at which contact changeover occurs on rising pressure.

Special versions

RT can be supplied with special switches as follows.

When ordering, please state:

- 1. Type
- 2. Code no. of standard unit
- 3. Code no. of special switch

 $<sup>^{2)}</sup>$  Max. starting current (L.R.) = 7 × AC 3.


<sup>&</sup>lt;sup>3)</sup> If current is led through the contacts 2 and 4, i.e. terminals and 4 connected but not terminal 1, the max. permissible load is increased by 90 W, 220V.




### **Design / Function**

- 5. Setting knob
- 9. Regulation range scale
- 10. Loop terminal
- 11. Pg 13.5 screwed cable entry
- 12. Main spring
- 14. Terminals
- 15. Main spindle
- 16. Switch
- 17. Guide bush
- 18. Contact arm
- 19. Differential setting nut
- 23. Bellows element
- 25. Fixing hole
- 27. Connection
- 38. Earth terminal
- 39. Blow-out disc
- 44. Pressure setting spindle

### Pressure control, type RT

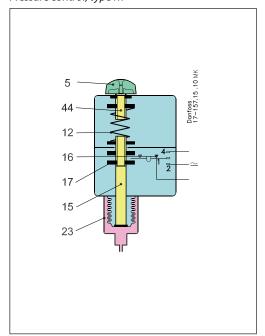

### Pressure control, type RT

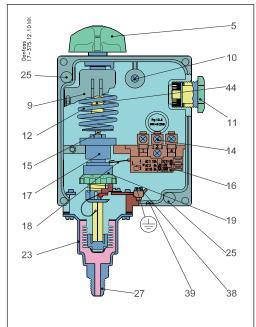

The bellows in the RT pressure control is connected to the low or high pressure side of the controlled system via the connection.

By turning the setting knob (5) the main spring (12) can be set to balance the pressure in the bellows.

A rise in pressure compresses the bellows and moves the main spindle (15) upwards until spring and bellows pressure are in equilibrium. The main spindle (15) is fitted with a guide bush (17) and a differential pressure setting nut (19) that together transfer the main spindle movement to the switch (16).

The RT 6W, RT 6B, RT 6S, RT 6AW, RT 6AB, RT 6AS, RT 30AW, RT 30AB, RT 30AS, RT 36B, RT 36S are equipped with a double bellows (an outer bellows and a regulating bellows).

These units have been tested and approved by TÜV (Technischer Überwachungs Verein, Germany) according to EN 12263.

General for EN 12263 approved units

- The units are equipped with a double bellows system. When pressure in the plant exceeds the set value, the unit will automatically stop the plant. The double bellows system prevents loss of system charge in the event of bellows rupture.
- Versions with designation W or AW cut again automatically when the pressure fallen to the set value minus the differential.

- Versions with designation B or AB are cut manually with the external reset button.
   This is possible when the pressure has fallen to the set value minus differential.
- Versions with designation S or AS can be cut in manually with the internal reset arm when the pressure has fallen to the set value minus differential.

As laid down by EN 12263 requirements, if a rupture occurs in the regulating bellows of the unit the refrigerating system compressor will be stopped and can only be restarted when the pressure control has been replaced.

A rupture in the outer bellows will cause the cut-out pressure of RT 36 to fall 2.5 bar, and the cut-out pressure of RT 6 and RT 30 to fall 4.5 bar under the set value. This means that the unit cuts out at normal condensing pressure and thus provides a fail-safe function.

All RT pressure controls, including those which are EN 12263 approved, operate independently of changes in the ambient temperature around the control housing. Therefore the set cut-out pressure and differential are held constant provided the permissible ambient temperatures are not exceeded.




### **Design / Function**


(continued)

- 5. Setting knob
- 9. Regulation range scale
- 11. Pg 13.5 screwed cable entry
- 12. Main spring
- 15. Main spindle
- 16. Switch
- 17. Upper guide bush
- 18. 18a, 18b. Contact arm
- 20. Lower guide bush
- 23. Bellows element
- 25. Fixing hole
- 27. Connection
- 38. Earth terminal
- 39. Blow-out disc
- 40. Neutral zone setting nut
- 44. Pressure setting spindle

Pressure control with adjustable neutral zone, type RT L

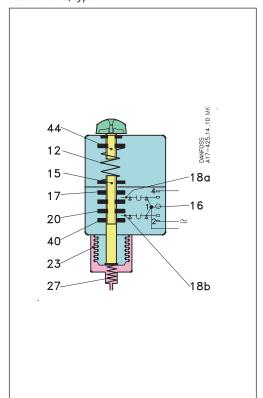


### Pressure control, type RT L

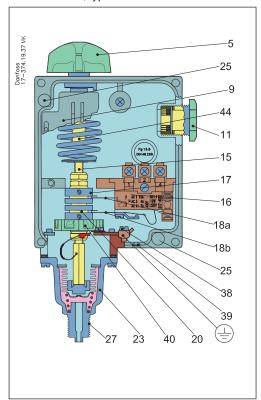

RT L pressure controls are fitted with a switch with an adjustable neutral zone.

This enables the units to be used for floating control. The neutral zone switch contact arms (18a) and (18b) are operated by the spindle guide bushes (17) and (20).


The upper guide bush (17) is Fixed while the lower guide bush (20) can be moved up or down by the setting nut (40). In this way the neutral zone can be varied between a minimum value (equal to the mechanical differential of the unit) and a maximum value (depending on the type of RT unit).

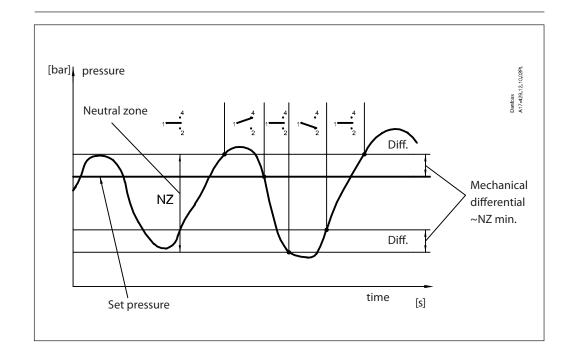




### **Design / Function** *(continued)*

Differential pressure control, type RT

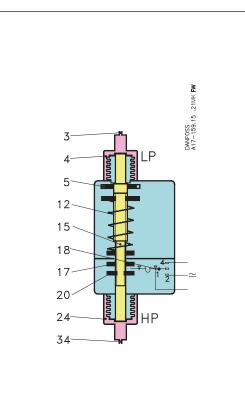

Differential pressure control, type RT

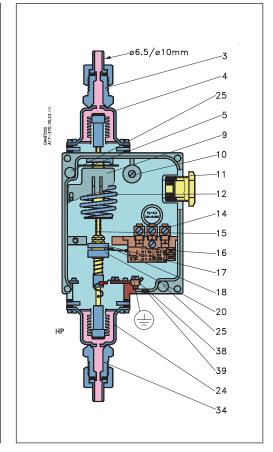

- 3. LP connection
- 4. LP bellows element
- 5. Setting disc
- 9. Regulation range scale
- 10. Coil clamp
- 11. Pg 13.5 screwed cable entry
- 12. Main spring
- 14. Terminals
- 15. Main spindle
- 16. Switch
- 17. Upper guide bush
- 18. Contact arm
- 20. Lower guide bush
- 24. HP bellows element
- 25. Fixing hole
- 34. HP connection
- 38. Earth terminal
- 39. Blow-out disc

An RT differential pressure control contains a single-pole changeover switch that makes or breaks depending on the pressure differential between two counteracting bellows elements (LP and HP).

Differential pressure controls are used primarily as protection against too low a differential pressure across liquid circulation pumps. A secondary application is the safeguarding of lubricating oil pressure in refrigeration compressors.

The function of the pressure control is conditional only on the differential pressure, i.e. the difference in pressure between the two counteracting bellows, whereas it is independent of the absolute pressure on both bellows. The bellows (4) and (24) are respectively connected to the LP port (lowest pressure) and the HP port (highest pressure).

The main spring (12) can be set for different differential pressures by the setting disc (5). If the differential pressure between highest and lowest pressures falls, the spindle (15) moves downwards and via the upper guide bush (17) actuates the switch contact arm (18). The reverse function occurs if the differential pressure rises.





### Terminology

### Floating control

A form of delayed control where the correcting element (e.g. valve, damper, or similar) moves towards one extreme position at a rate independent of the magnitude of the error when the error exceeds a definite positive value, and towards the opposite extreme position when the error exceeds a definite negative value.

### Hunting

Periodic variations of the controlled variable from the fixed reference.

### Neutral zone

The interval between the make points of the two contacts.

#### "Snap function"

A certain contact force is maintained until irrevocable "snap" is initiated. The time during which the contact force approaches zero is thus limited to a very few milliseconds. Therefore contact bounce cannot occur as a result of, for example, slight vibrations, before the cut-out point.

Contact systems with "Snap function" will change over even when micro-welds are created between the contacts during cut-in. A very high force is created during cut-out to separate the contacts. This force immediately shears off all the welds. Thus the cut-out point of the unit remains very accurate and completely independent of the magnitude of the current load.

### Setting

### RT with automatic reset - LP

The knob is used to set the lowest pressure at which the contact system must be activated (cut-out or cut-in).

This value can be read on the main scale of the unit.

The differential roller must be used to set the differential.

Highest activating pressure = lowest activating pressure + set differential.

### RT with manual reset – LP

RT pressure controls RT 1 and RT 1A are obtainable in versions with min. reset. When the pressure falls to the setting value the pressure control cuts out.

Manual reset becomes possible when the pressure in the bellows system has risen to a value corresponding to the set value + the differential.

On falling pressure the follower activates the contact system arm and the contact changes over.

The scale is calibrated so that the scale value corresponds to contact changeover on falling pressure.

### RT with automatic reset – HP

The knob can be used to set the lowest pressure at which the contact system must be activated (cut-out or cut-in).

This value can be read on the main scale of the unit.

The differential must be set with the differential roller. Highest activating pressure = lowest activating pressure + set differential.

### RT with manual reset - HP

Pressure control RT 5A is obtainable with max. reset. When the pressure has risen to the set value the pressure control cuts out.

Manual reset only becomes possible when the pressure has fallen to a value corresponding to the set pressure minus the differential.


The differential roller is then used as a follower. On rising pressure the differential roller activates the contact system arm and the contact changes over.


The scale is calibrated so that the scale values correspond to contact changeover on rising pressure, which is opposite to RT units with automatic reset.





# Dimensions [mm] and weight [kg]


### RT pressure control housing

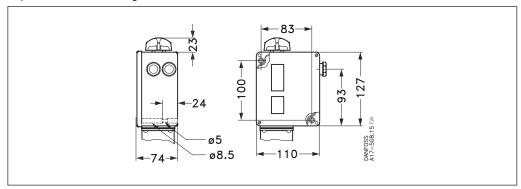


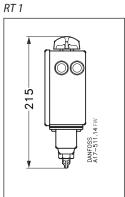


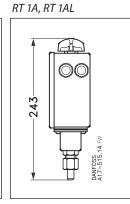


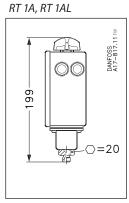


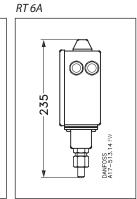


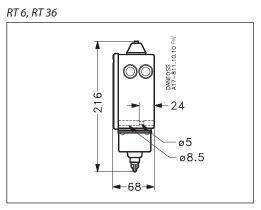


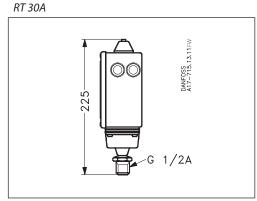

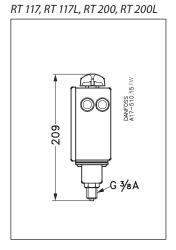





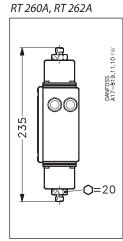

Net weight approx. 1 kg

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed.

All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.